



The Polaris Axys Blow Hole Install Instructions




1. Start by removing the left hand side panel. Remove the oil tank retaining bolt. Save the flat washer and discard the bolt.



2. Using a 3/16" drill bit, carefully remove the rivets and bracket and discard both.
CAUTION: DO NOT PUNCTURE THE OIL TANK.



3. Place new bracket provided in the stock location. Place two steel rivets into the stock holes, then mark where to drill remaining two. Drill into the aluminum shelf and install rivets

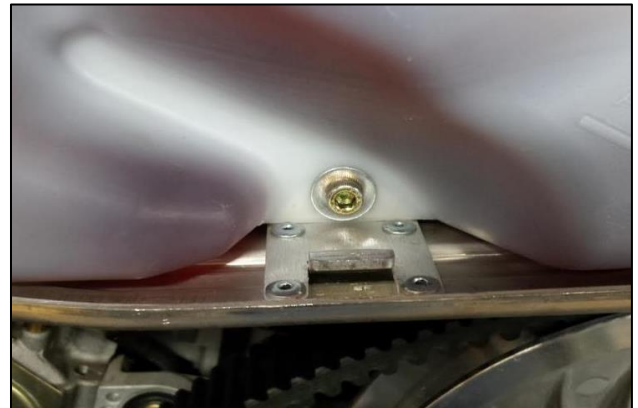

4. Install the previously removed flat washer onto the new bolt and install into the new bracket, holding the oil tank in place.

MTNTKperformance.com






5. Drill a 3/16" hole in the aluminum shelf measuring 3" back from the front of the shelf.



6. Place wire holder onto the Blow Hole wire then rivet into place as shown.

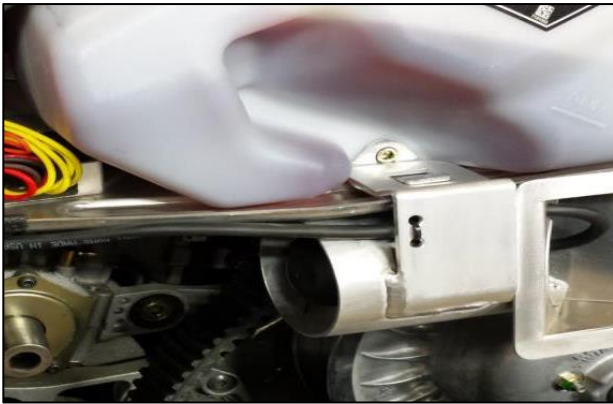

7. Mount the Blow Hole and route the wires as shown so there is no slack above the primary clutch. Plug into the factory DC power port. **CAUTION: DO NOT PLUG INTO ECU PORT!**



8. With the motor assembly in place, install the side panel. Now is a good time to remove the sticker from the side panel while waiting for imprint to appear on the side panel foam.




9. Using a straight edge, draw a line from corner to corner within the imprint as shown.



10. Drill a pilot hole in the center of the X, then using a 3" hole saw, drill a hole.

MTNTKperformance.com



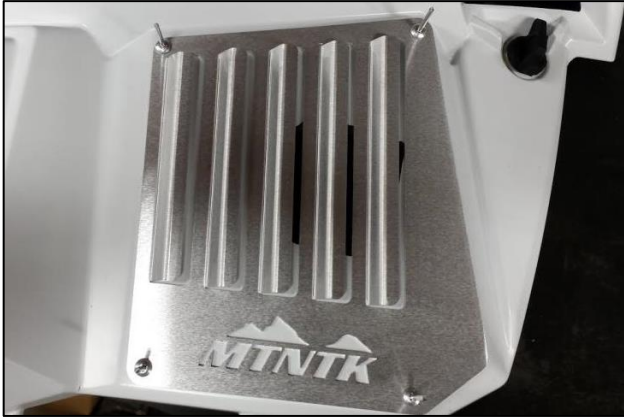

11. Install the vent plate to match body lines of the panel. Mark first, then drill and install the four aluminum expanding rivets as shown.

Disclaimer: Never attempt to adjust or run engine with side panel removed. Do not stick your fingers into the fan housing as it will cut or dismember. MTNTK Performance is not responsible for damages incurred by using this product or improper installation.

Kit Contents:

- 4 - 3/16" Aluminum Expanding Rivets
- 5 - 3/16" Steel Rivets
- 1 - Oil Tank Mounting Bracket
- 1 - Blow Hole Motor Assembly
- 1 - Side Vent Panel

*If there are any questions please contact:
MTNTK Performance
208-652-0122
orders@mtntkperformance.com*

MTNTKperformance.com

