

MTNTK

PERFORMANCE


The Polaris RZR RS1 & Turbo S Blow Hole Install Instructions



Remove the clutch intake tube by loosening the clamps on both ends of the clutch intake hose.



Install the Blow Hole inside the clutch intake tube by heating up the tube and stretching it over the Blow Hole. Make sure the wire is pointed upward as shown.

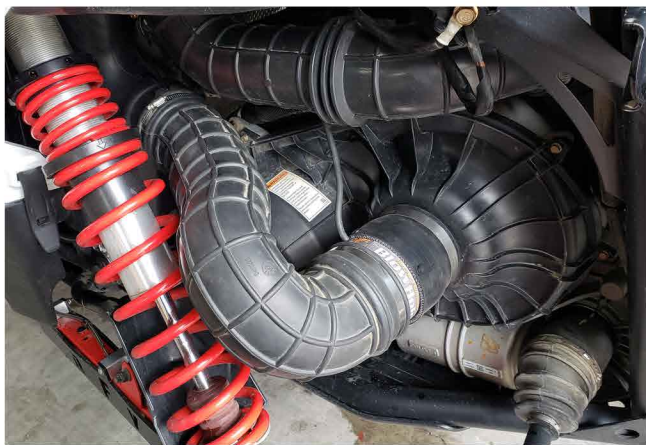

Slide the Blow Hole over the clutch cover. Install clutch intake tube back onto stock intake duct. Tighten all clamps. Make sure the clutch intake tube is not touching the shock spring.



Locate the factory tail light connector and plug Blow Hole directly into the tail light as shown. Route wire so it does not rub or chafe.